

# ER-BT200 IM, SIZE:600x280mm/128g铜版纸/6x2折页/单面/单色印刷

<div data-bbox="199 214 671 373" data-label="Image"> </div> <div data-bbox="199 378 671 500" data-label="Section-Header"> <h2>Portable Dual Alarm Clock With FM Radio, Bluetooth Speaker, 12 Watt Stereo, USB Charge In, Hands-free Calling &amp; Dimmer / LED Decor</h2> </div> <div data-bbox="199 633 602 682" data-label="Section-Header"> <h1>OWNER'S MANUAL</h1> </div> <div data-bbox="199 691 344 718" data-label="Text"> <p>ER-BT200</p> </div> <div data-bbox="361 737 499 846" data-label="Image"> </div> <div data-bbox="275 851 602 873" data-label="Text"> <p>Visit our website at <a href="http://www.emersonradio.com">www.emersonradio.com</a></p> </div>	<div data-bbox="706 254 1188 418" data-label="List-Group"> <p><b>BUILT-IN BATTERY CARE:</b></p> <ul style="list-style-type: none"> <li>Please observe the following if the product contains a battery.</li> <li>Your product is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles.</li> <li>The battery can be charged and discharged hundreds of times, but will eventually wear out.</li> <li>Unplug the charger from the electrical plug and the product when not in use. Do not leave a fully charged battery connected to a charger since overcharging may shorten its lifespan.</li> <li>If left unused, a fully charged battery will lose its charge over time.</li> <li>Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifespan of the battery.</li> <li>Always try to keep the battery between 0°C and 45°C (32°F and 113°F). A product with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.</li> </ul> <p><b>BATTERY WARNING!</b></p> <ul style="list-style-type: none"> <li>Caution-The battery used in the product may present a risk of fire or chemical burn if mistreated.</li> <li>Unless otherwise specified in the user manual or quick start guide the battery in your product can not be removed or replaced by the user. Any attempt to do so is risky and may result in damage of the product. Use of other batteries may present a risk of fire or explosion and the warranty will be terminated.</li> <li>Only recharge your battery according to local regulations. Please recycle when possible.</li> <li>Do not dispose the battery as household waste or in a fire as it may explode.</li> <li>Batteries may explode if damaged.</li> </ul> <p><b>CHARGING WARNING!</b></p> <ul style="list-style-type: none"> <li>When you disconnect the power cord of a charger from AC mains, grasp and pull the plug, not the cord.</li> <li>Never use a charger that is damaged.</li> <li>Do not attempt to disassemble the charger as it may expose you to dangerous electric shock. Incorrect reassembly can cause electric shock or fire when the product is subsequently used.</li> <li>Avoid charging your speaker in extremely high or low temperatures and do not use the charger outdoors or in damp areas.</li> </ul> </div>	<div data-bbox="1222 214 1670 245" data-label="Section-Header"> <h2>4 Package Contents</h2> </div> <div data-bbox="1239 254 1653 491" data-label="Image"> </div> <div data-bbox="1222 573 1670 609" data-label="Section-Header"> <h2>5 Location of controls and Indicators</h2> </div> <div data-bbox="1222 618 1670 891" data-label="Image"> </div> <div data-bbox="1222 937 1670 973" data-label="Section-Header"> <h2>TOP PANEL</h2> </div> <div data-bbox="1222 982 1670 1264" data-label="Image"> </div>	<div data-bbox="1739 214 2221 245" data-label="Section-Header"> <h2>8 Setting the Time Manually</h2> </div> <div data-bbox="1739 254 2221 527" data-label="Text"> <p>Switch on the two buttons located at the back of unit and at the top of unit to ensure the unit turned ON and Long Press the "M" button until the display "Flashes" Hour</p> <ol style="list-style-type: none"> <li>Short press tune down <b>▲/▼</b> or tune up <b>▶/◀</b> button to move backward or move forward Hour</li> <li>Short press the "M" button until the display "Flashes" Minute</li> <li>Short press tune down <b>▲/▼</b> or tune up <b>▶/◀</b> button to move backward or move forward Minute</li> <li>Short press the "M" button to stop "Flashes" after time set</li> <li>Select 12/24 hour format by short press tune down <b>▲/▼</b> or tune up <b>▶/◀</b> button for selection</li> </ol> <p>Note: To skip manual adjustment, keep it idle for 5 seconds to resume to clock display mode. Long Press <b>⏻</b> and hold for 5 seconds to reset</p> </div> <div data-bbox="1739 555 2221 591" data-label="Section-Header"> <h2>9 Setting the Alarm</h2> </div> <div data-bbox="1739 600 2221 846" data-label="Text"> <p><b>Adjusting the Wake up times</b></p> <p>Press <b>⏻</b> button to adjust the Wake up time for Alarm 1. Press <b>⏻</b> button to adjust the Wake up time for Alarm 2.</p> <p>Long Press <b>⏻</b> / <b>⏻</b> to set Alarm Time until the display "Flashes" Hour Short Press tune down <b>▲/▼</b> or tune up <b>▶/◀</b> button to move backward or move forward "Hour"</p> </div>	<div data-bbox="2255 214 2737 245" data-label="Section-Header"> <h2>11 Listening to FM Radio</h2> </div> <div data-bbox="2255 254 2737 518" data-label="Text"> <p>Press the <b>POWER</b> button <b>⏻</b> to turn ON the unit and press <b>M</b> button to change to Radio mode (FM and "Mix" On)</p> <ol style="list-style-type: none"> <li>Short Press <b>M</b> button to switch to Radio mode</li> <li>Auto Searching / Scanning FM Stations (Long press <b>M</b> button 2 seconds and release for automatically search and save the scanned radio stations)</li> <li>Recall Stations from Memory</li> </ol> <p>Note: Searching will stop at a station with acceptable reception for storing to memory.</p> <ul style="list-style-type: none"> <li>Short Press <b>M</b> button, Program number will be shown on the display and switch your stored program number and listen to your favorite station.</li> <li>Short Press Tune Down <b>▲/▼</b> or Tune Up <b>▶/◀</b> button to step backward or forward 0.1MHz to fine tune or search your favorite station.</li> <li>Long Press tune down <b>▲/▼</b> or tune up <b>▶/◀</b> button to adjust volume</li> <li>When not listening, press the <b>M</b> button to switch to either radio or clock mode.</li> <li>Or press power button <b>⏻</b> to turn the unit off.</li> </ul> <p>Note: Keep the unit away from other electronic devices to avoid radio interference. For better reception, adjust the position of the unit.</p> </div> <div data-bbox="2255 527 2737 564" data-label="Section-Header"> <h2>12 Enjoying Audio Source via AUX IN Jack</h2> </div> <div data-bbox="2255 573 2737 682" data-label="Text"> <p>Press the power button to turn the unit ON Plug AUX cable in the "AUX" jack at back of unit, another end connects to the computer, headphone or line-out jack of an audio device, automatically enter AUX mode, and AUX indicator lights ON in solid.</p> </div> <div data-bbox="2255 700 2737 737" data-label="Section-Header"> <h2>13 Sleep Timer</h2> </div> <div data-bbox="2255 746 2737 882" data-label="Text"> <p>Press the <b>POWER</b> button <b>⏻</b> to turn ON the unit</p> <p>Short press the <b>SLEEP</b> button to switch countdown timer ("Zz" ON)</p> <ul style="list-style-type: none"> <li>Selecting 3 preset countdown sleep timers by short press and then release, the sleep timer will start counting down and turn off the unit when the selected sleep timer elapsed.</li> <li>S15 stand for 15 minutes</li> <li>S30 stand for 30 minutes</li> <li>S60 stand for 60 minutes</li> <li>To cancel the sleep timer during count down process, repeatedly short press "sleep" button jumped to S15 &gt; S30 &gt; S60 to OFF ("Zz" indicator disappeared)</li> </ul> </div>	<div data-bbox="2772 214 3254 245" data-label="Section-Header"> <h2>17 LIMITED WARRANTY</h2> </div> <div data-bbox="2772 254 3254 573" data-label="Text"> <p>Emerson Radio Corp. warrants this product to be free from manufacturing defects in original material, including original parts, and workmanship under normal home use and conditions ("manufacturing defect") for a period of ninety (90) days from date of original purchase, and if used in the United States. Should service be necessary under this warranty, Emerson will provide the following at our Return Repair Facility provided the manufacturing defect is verified along with the date of purchase:</p> <ul style="list-style-type: none"> <li>Repair service for ninety (90) days from date of original purchase at no charge for labor and parts.</li> </ul> <p>To Receive Authorization to Return a Defective Item, please contact Emerson Customer Service at 1-800-898-9020 or at <a href="http://www.emersonradio.com/service/return-policy">http://www.emersonradio.com/service/return-policy</a>. Have your Model number, Serial Number and dated Proof of Purchase with you when you call.</p> <p>In the event the product must be returned to Emerson:</p> <ul style="list-style-type: none"> <li>Pack the unit in a well-padded heavy corrugated box. Please insure the item is well padded to avoid damage while in transit back to our facility. <b>If the item incurs damage, it will NOT be replaced and the consumer will be responsible for return freight costs to receive their same unit back.</b></li> <li>Enclose your check or money order payable to Emerson Radio in the amount of \$10 to cover return shipping and handling costs.</li> <li>Enclose a note with your name, address, phone number, Return Authorization number and brief reason for returning the unit.</li> <li>Enclose a copy of your proof of purchase (warranty service will not be provided without dated proof of purchase)</li> <li>Ship the unit prepaid via UPS or parcel post (SHIP INSURED and obtain a tracking number).</li> </ul> <p><b>NOTE</b> This warranty does not cover:</p> <ol style="list-style-type: none"> <li>Damage to equipment not properly connected to the product.</li> <li>Cost incurred in the shipping of the product to and from Emerson's Return Facility.</li> <li>Damage or improper operation of unit caused by customer abuse, misuse, negligence or failure to follow operating instructions (including cleaning instructions) provided with the product.</li> <li>Ordinary adjustments to the product which can be performed by customer as outlined in the owner's manual.</li> <li>Signal reception problems caused by external antenna or cable systems.</li> <li>Products not purchased in the United States.</li> <li>Damage to product if used outside the United States.</li> </ol> <p>THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED HEREIN BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. EMERSON MAKES NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE. THE EXTENT OF EMERSON RADIO CORP'S LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL EMERSON RADIO CORP'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL EMERSON RADIO CORP. BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. HOWEVER, YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS</p> </div>
<div data-bbox="199 942 671 973" data-label="Section-Header"> <h2>1 WARNING</h2> </div> <div data-bbox="199 982 671 1483" data-label="List-Group"> <p><b>IMPORTANT SAFETY INSTRUCTIONS</b></p> <ol style="list-style-type: none"> <li>Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.</li> <li>Do not use this apparatus near water.             <ul style="list-style-type: none"> <li>Never remove the casing of this product</li> </ul> </li> <li>Clean only with dry cloth.</li> <li>Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.</li> <li>Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.</li> <li>Only use attachments / accessories specified by the manufacturer.</li> <li>Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.</li> <li>Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.</li> <li>The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.</li> <li>Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.</li> <li>Use of a speaker will impair your ability to hear other sounds. Use caution while using your speaker when you are engaging in any activity that requires your full attention.</li> <li>If you have a pacemaker or other electrical medical devices, you should consult your physician before using the product.</li> <li>This package contains small parts that may be hazardous to children and should be kept out of reach of children at all times. The product is not a toy - never allow children to play with the product. The bags themselves or the many small parts they contain may cause choking if ingested.</li> <li>Never try to dismantle the product yourself, or push objects of any kind into the product, as this may cause short circuits which could result in a fire of electric shock.</li> <li>None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product. If any parts of your product require replacement for any reason, including normal wear and tear or breakage, contact your dealer.</li> <li>Avoid exposing your product to rain, moisture or other liquids to protect against damage to the product or injury to you.</li> <li>If the product overheats, if the product has been dropped or damaged, or if the product had been dropped in a liquid, discontinue use.</li> <li>Never mount or store the product over any airbag deployment area, as serious injury may result when an airbag deploys.</li> <li>Do not use in areas where there are explosive hazards.</li> <li>Observe all signs and instructions that require an electrical device or RF radio product to be switched off in designated areas such as hospitals or airports.</li> <li>Dispose of the product according to local standard and regulations.</li> </ol> <p><b>CAUTION:</b> Removal of the built-in battery invalidates the warranty and may destroy the product.</p> </div>	<div data-bbox="706 942 1188 973" data-label="Section-Header"> <h2>2 Important Notes</h2> </div> <div data-bbox="706 982 1188 1319" data-label="List-Group"> <ul style="list-style-type: none"> <li>Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates heat, places lacking ventilation, dusty areas, places subject to constant vibration and / or humid or moist areas.</li> </ul> <p><b>FCC Information</b></p> <p>This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>Reorient or relocate the receiving antenna.</li> <li>Increase the separation between the equipment and receiver.</li> <li>Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:</p> <ol style="list-style-type: none"> <li>(1) This device may not cause harmful interference, and</li> <li>(2) This device must accept any interference received, including interference that may cause undesired operation.</li> </ol> <p>Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>Thank you for purchasing this Emerson Strong Bass Portable Bluetooth Speaker ER-BT200. If you encounter any problems with the set up or operation of this item, please call the Emerson Consumer Products Corp., Customer Service Hotline, toll free, at <b>1-800-898-9020</b>.</p> </div> <div data-bbox="706 1328 1188 1355" data-label="Section-Header"> <h2>3 Preparation For Use</h2> </div> <div data-bbox="706 1365 1188 1574" data-label="List-Group"> <p><b>Unpacking And Set Up</b></p> <ul style="list-style-type: none"> <li>Remove the unit from the box and remove all packing material from the unit. <b>Save the packing material, if possible, in case the unit ever needs to be serviced or transported. The original box and packing material is the only safe way to pack your unit to protect it from damage in transit.</b></li> <li>Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.</li> <li>The serial number on the bottom of your unit and write this number in the space provided on the Warranty page of this manual.</li> <li>Place your unit on a level surface such as a table, desk or shelf, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.</li> </ul> <p><b>Protect Your Furniture</b></p> <p>This model is equipped with non-skid rubber "feet" to prevent the product from moving when you operation the controls. These "feet" are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber "feet" to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber "feet" before you place the product on fine wooden furniture.</p> <p><b>Power Source</b></p> <p>This product is designed to be powered by a built-in rechargeable battery, that can be charged up with a DC 5V/1A power supply via a micro USB plug. Remove the charger after fully charged.</p> </div>	<div data-bbox="1222 1292 1704 1319" data-label="Section-Header"> <h2>6 Travel Lock</h2> </div> <div data-bbox="1222 1328 1704 1410" data-label="Text"> <p>The unit includes a main switch at back of speaker to save battery life and prevent inadvertent button activation when in transit.</p> <p>When in power off, all functions are disabled except the time and alarm function. Time and alarm will keep functioning even the display OFF.</p> </div> <div data-bbox="1222 1437 1704 1465" data-label="Section-Header"> <h2>7 Charging the Unit</h2> </div> <div data-bbox="1222 1474 1704 1574" data-label="List-Group"> <ol style="list-style-type: none"> <li>Connect the micro USB plug to the micro USB charging port at the back of the unit.</li> <li>Connect the standard USB plug end of the cable to a power USB port on a computer, or other USB charging device, or AC adapter with USB jack (not included). For first time use, approximately 3 hours is required for a full charge.</li> <li>A red indicator glows while the unit is charging and it changes to green when unit is fully charged.</li> </ol> <p>Note: Battery will last up to 4 hours when connected wirelessly and up to 12 hours when connected through Line-In Audio Jack.</p> </div>	<div data-bbox="1739 1264 2221 1292" data-label="Section-Header"> <h2>10 Pairing Bluetooth Speaker</h2> </div> <div data-bbox="1739 1301 2221 1610" data-label="Text"> <p>Press the <b>POWER</b> button <b>⏻</b> to turn the unit ON</p> <ul style="list-style-type: none"> <li>Enable your Bluetooth device and select ER-BT200 from its Available / Paired device list. If pairing successful, the unit will prompt the voice notice "Bluetooth device is connected" and <b>ⓧ</b> will become solid.</li> <li>Automatic connection with your Bluetooth devices is possible if they have been paired successfully with this unit before.</li> <li>After paired, you can play your music through this Bass Boosted Bluetooth Speaker.</li> <li>Long Press tune down <b>▲/▼</b> or tune up <b>▶/◀</b> button to adjust volume and it can also be adjusted the volume on connected audio device.</li> <li>Short Press <b>M</b> to pause or resume music playback as well as answering incoming call.</li> <li>When not listening, press the <b>M</b> button to switch to either radio or clock mode.</li> <li>Or press power button <b>⏻</b> for 1 second to turn the unit off.</li> </ul> <p>Note: If pairing unsuccessful, all previously paired Bluetooth devices around should be disconnected or turned off first, in order to avoid making any auto reconnection between them. Then, set this unit to Bluetooth mode, and tap the Bluetooth switch on your phone / device off and back on again to refresh / search any nearby "ER-BT200" for pairing.</p> <p>If no Bluetooth device to connect in 3 minutes, automatically switch to Time mode. If you want to disconnect this unit from your Bluetooth enabled device after pairing successful, short press <b>M</b> button to switch to radio mode. To reconnect this unit, just short press <b>M</b> button turns to Bluetooth mode it will automatic connected or select "ER-BT200" again from the Available / Paired device list when the unit in Bluetooth mode.</p> </div>	<div data-bbox="2255 942 2737 973" data-label="Section-Header"> <h2>14 3-Level Dimmer Control &amp; LED Decor</h2> </div> <div data-bbox="2255 982 2737 1137" data-label="Text"> <p>The brightness of the clock display can be set at High/ Medium/ Low level in standby, Bluetooth, Radio and AUX modes with a press of "dimmer" button. The LED Decor can be set at High/Low/Off by pressing and holding the "dimmer" button for 2 seconds.</p> <p>Note: The brightness of display will stay at the last setting right before power off.</p> </div> <div data-bbox="2255 1164 2737 1192" data-label="Section-Header"> <h2>15 Care and Maintenance</h2> </div> <div data-bbox="2255 1201 2737 1392" data-label="List-Group"> <ul style="list-style-type: none"> <li>Permanent hearing loss may result from long-term exposure to sound at high volumes.</li> <li>Use as low a volume as possible.</li> <li>Speakers are capable of delivering sounds at loud volumes and high pitched tones. Under certain circumstances, exposure to such sounds can result in permanent hearing loss damage. The volume level may vary based on conditions such as the radio you are using and volume settings. Avoid prolonged use of the speaker at excessive sound pressure levels. Please read the Safety Guidelines below prior to using the speaker.</li> <li>You Can Reduce the Risk of Hearing Damage by Following These Safety Guidelines During the Use of the Product:             <ul style="list-style-type: none"> <li>Turn the volume control to its lowest level, when connecting the speaker and then</li> <li>Slowly adjust the volume control to a comfortable level.</li> <li>Keep the volume at the lowest level possible;</li> <li>If increased volume is necessary, adjust the volume control slowly, and</li> <li>If you experience discomfort or ringing in your ears, immediately discontinue using the speaker.</li> <li>With continued use at a high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.</li> </ul> </li> </ul> </div> <div data-bbox="2255 1410 2737 1437" data-label="Section-Header"> <h2>16 Troubleshooting</h2> </div> <div data-bbox="2255 1446 2737 1519" data-label="List-Group"> <ul style="list-style-type: none"> <li><b>UNIT DOESN'T RESPOND (NO POWER)</b> Make sure unit is completely charged. Check that all connections are correct and properly plugged in. Make sure your device is properly paired with the ER-BT200</li> <li><b>RESETTING THE UNIT</b> If the unit does not respond properly or appears to be "frozen", slide the main switch off and back on again to reset the unit.</li> </ul> </div>	<div data-bbox="2772 982 3254 1019" data-label="Text"> <p>ON IMPLIED WARRANTIES OR EXCLUSION OF CONSEQUENTIAL DAMAGE, THEREFORE THESE RESTRICTIONS MAY NOT APPLY TO YOU. <b>10-90-1402A</b></p> </div> <div data-bbox="2772 1028 3254 1064" data-label="Text"> <p>The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference.</p> </div> <div data-bbox="2772 1155 3254 1210" data-label="Text"> <p>Model Number: <b>ER-BT200</b> Serial Number: _____</p> </div> <div data-bbox="2858 1237 3168 1483" data-label="Image"> <p>FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL: 1-800-898-9020</p> <p>FOR CUSTOMER SERVICE, PLEASE E-MAIL TO: <a href="mailto:internet@emersonradio.com">internet@emersonradio.com</a></p> <p>OR WRITE TO: Emerson Radio Corp. Consumer Affairs Dept. 35 Waterview Blvd Parsippany, NJ 07054</p> </div> <div data-bbox="2772 1519 3254 1547" data-label="Page-Footer"> <p>Emerson Part No.: ERBT200-20180922-00 Printed in China</p> </div>