


OWNER'S MANUAL

Model HB: 10 cup Programmable Coffeemaker

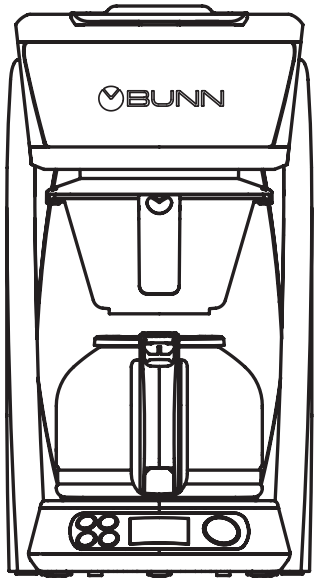

Congratulations on the purchase of this Golden Cup home coffeemaker as certified by the Specialty Coffee Association (SCA).

Only coffeemakers that pass rigorous testing and requirements receive SCA certification and BUNN is no stranger to these standards of coffee brewing. For over 60 years, BUNN commercial coffee brewing equipment has consistently delivered Golden Cup standards for restaurants and cafés around the world. This makes BUNN the ideal manufacturer to offer a home coffeemaker that meets these same standards.

Building on our commercial brewing experience and scientific knowledge of coffee, BUNN has designed an exclusive brewing process that properly heats all water to the ideal brewing temperature of 200° F before it is showered over the coffee grounds. In contrast, the average drip coffeemaker inconsistently heats water and then slowly “burps” or “spits” the water over the grounds, often resulting in a bitter tasting cup of coffee. This new home brewer consistently delivers optimal flavor extraction in a full carafe of exceptional tasting coffee in about 10 minutes.

From that single cup at home to a stadium full of people, BUNN keeps it simple when engineering brewing solutions: respond to what a customer needs for a specific serving situation and deliver the best quality in the cup for that occasion. Just as you would enjoy great tasting coffee at your favorite restaurant that chooses BUNN equipment, we hope you enjoy this Golden Cup coffee in your home.



TABLE OF CONTENTS

| | |
|------------------------------------|------------------------|
| Get To Know Your Coffeemaker.....1 | Care & Cleaning5 |
| Important Safeguards2 | Troubleshooting6 |
| Programming Your Coffeemaker.....3 | Customer Support.....7 |
| How To Brew4 | Warranty8 |

SPECIFICATIONS


ELECTRICAL: UL and C-UL Listed for Household Use Only. This brewer has an attached, 3-prong grounded cord set and requires 2-wire service with ground, rated 120 volts AC, 11 amps, single phase, 60Hz, 1300 watts.

BREW CAPACITY: 4 – 10 cups per batch (20 – 50oz).

Not designed for High Altitude locations above 4,000 feet. High Altitude units are available.

See Bunn.com for details.

GET TO KNOW YOUR BREWER

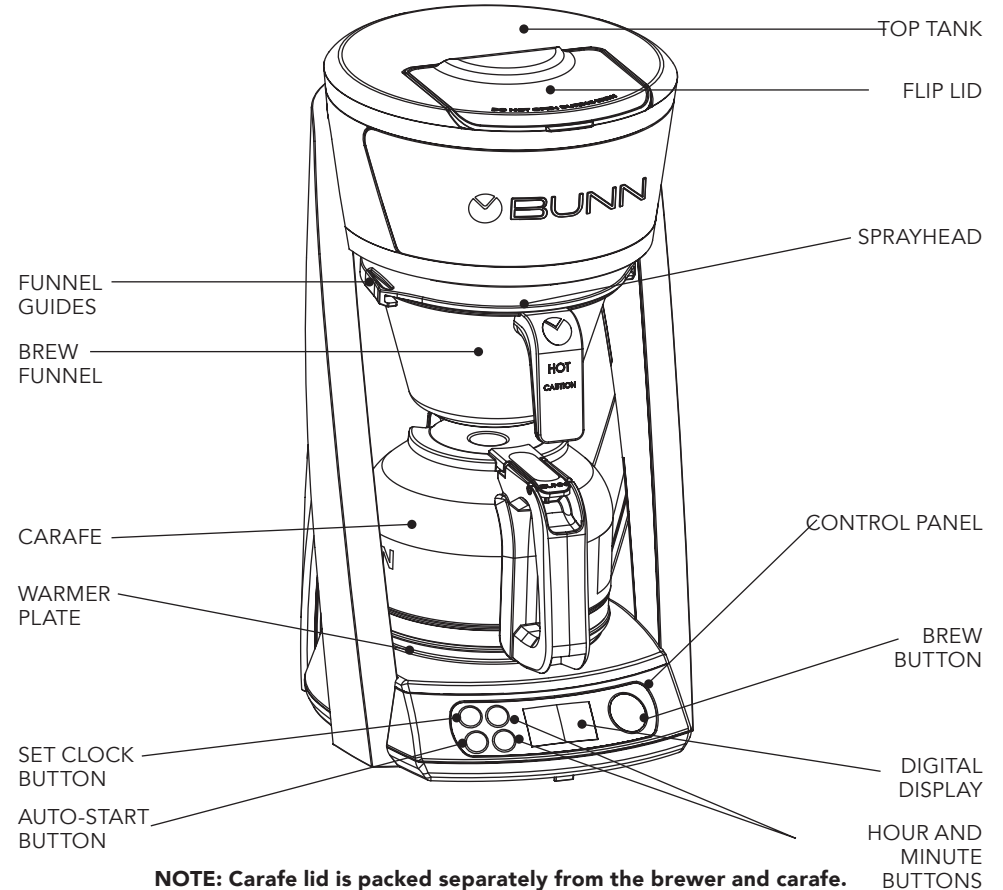

IMPORTANT SAFEGUARDS

Follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or personal injury:

- **READ ALL INSTRUCTIONS.**
- Do not touch hot surfaces. Use handles.
- To protect from electric shock, do not place cord, plugs, or brewer in water or other liquids.
- Do not open lid during heating or brewing.
- Close supervision is necessary when brewer is used by or around children.
- Unplug from outlet when not in use and before cleaning. Let brewer cool before removing or replacing parts, and before cleaning.
- Do not operate brewer with a damaged cord or plug or if the brewer malfunctions or is damaged in any way. Contact Customer Support (see page 7)
- Using an accessory not evaluated for use with this brewer may cause injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place brewer on or near a hot gas or electric burner or in a heated oven.
- Do not use brewer for any purpose other than its intended use.
- Do not remove brew funnel or carafe while brewing.
- The carafe is designed for use with this appliance. Do not use carafe on a range top or in a microwave.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe with a loose or weakened handle.
- Do not pour any liquid into the water tank other than water or vinegar for cleaning, as specified in this manual.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- When brewer is not in use, keep lid in the closed position.

SAVE THESE INSTRUCTIONS

NOTE: Heating water to the ideal brewing temperatures naturally generates some steam. **BUNN** suggests using your Brewer in an open area, and never under cabinets that may be damaged over time by exposure to steam.

NOTE: The short power-supply cord supplied reduces the risk of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, its marked electrical rating must be at least as great as the electrical rating of the brewer. The longer cord should be arranged so it will not hang over the edge of a table or counter and that it cannot be pulled on by children or tripped over. The extension cord must be a 3-wire cord of the 3-prong, 3-socketed, grounding type (including grounding conductor).

Record the Model and Date code before using: The model is located on the lower back of your brewer. The date code is located on the metal prongs of your power cord - 4 digits are etched on each side of the metal prongs (Ex. 9999 99CH).

MODEL: _____ **HB** _____

DATE CODE: _____

Please have your Model and Date Code ready when calling for service.

Questions?

Visit www.bunn.com or call USA 1-800-352-2866 Canada 1-800-263-2256



This symbol alerts you to the risk of fire or electric shock in the accompanying message.



This symbol alerts you to important operating and service instructions.

PROGRAMMING YOUR COFFEEMAKER

NOTE: You must set the clock to use the Auto-Start function. Remember to reset the clock for time changes and power outages.

SET CLOCK

1. Plug power cord into standard electrical outlet.
2. Display will flash for 10 seconds before setting automatically. (If not set, 12:00 AM becomes default time.)
3. Set time using H (hour) and M (minute) buttons.
4. Numbers scroll forward only.
5. Take care to select correct AM/PM time.
6. Press Clock button again to set time.



NOTE: The Auto-Start function must be activated each time you want to schedule a brew. If the Auto-Start button is not illuminated, the Auto-Start function is not activated.

AUTO-START (OPTIONAL)

1. Press Auto-Start button. H (hour) and M (minute) buttons will light up, time will flash on digital display.
2. Set time using H (hour) and M (minute) buttons. Numbers scroll forward only. Stop at desired Auto-Start time. Take care to select correct AM/PM time.
3. When desired time is on the digital display, press Auto Start button to activate. It will be set and Auto-Start will activate or wait 10 seconds and it will set automatically.
4. Place BUNN coffee filter and coffee grounds into the Brew Funnel and slide into the Funnel Guides.
5. Fill coffeemaker with the desired amount of water and place Carafe on base of coffeemaker (failure to follow steps 4 and 5 may result in property damage).

NOTE: To check your Auto-Start setting at idle, press the Auto-Start button twice and the digital display will flash the programmed time. The flashing time will remain the set time unless you change it. After 10 seconds with no buttons pushed, the Auto-Start button will illuminate and Auto-Start is set. To cancel, press Auto Start again.

HOW TO BREW



1. Place **BUNN** coffee filter into the Brew Funnel.



2. Measure fresh coffee into the filter, shaking gently to level the grounds.

How to get your Golden Cup

| Water | Coffee |
|---------------|-------------------------|
| 4 Cups/20 oz | 32.5 grams ~4-5 tbsps |
| 6 Cups/30 oz | 48.7 grams ~6-7 tbsps |
| 8 Cups/40 oz | 64.9 grams ~8-9 tbsps |
| 10 Cups/50 oz | 81.3 grams ~10-11 tbsps |

GOLDEN RATIO: 1part coffee to 18 parts water

Note: if you are using whole beans, for better precision, weigh the coffee before it is ground. To more accurately fill the brewer, make sure the water meets (and not exceeds) the measuring step in the Top Tank.



3. Slide Brew Funnel into Funnel Guides.




4. Fill Carafe with water – minimum 4 cups (20oz), maximum 10 cups (50oz).

Open Flip Lid on top of brewer; pour water into Top Tank.
Close Flip Lid. Do not open lid during heating or brewing.

TIP: Pour in warm or hot water to decrease heating time.



5. Position Drip Free carafe on base under Brew Funnel.

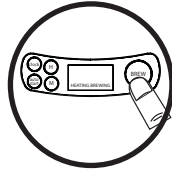

6. Press Brew button to begin (~6 minute) Heating.

Brewer is on when the red light around the Brew Button is illuminated.
Digital display will read 'Heating'.



7. Brewing begins immediately after Heating is complete.

Digital display will read 'Brewing'.

The Warmer Plate will turn on – and will automatically shut off after 2 hours.

After final drip out, remove Brew Funnel and discard filter and grounds. Do not touch hot grounds.

To turn the Warmer Plate off when brewing completes, push the Brew Button (no red light visible).



8. Turning the Warmer Plate back ON.

Warmer plate will automatically shut off after 2 hours. Press & hold Brew Button for 5 seconds to turn back on.

CARE & CLEANING

Wash the brew funnel and glass carafe after each use – both are top rack dishwasher safe.

Occasionally wipe the outside of your coffeemaker, including the area above the funnel, with a mild, non-citrus detergent and a damp cloth. While cleaning your coffeemaker, check the glass carafe handle and tighten with a phillips screwdriver if it's loose.

This unique brewing system is sensitive to mineral build-up from the water you use. Therefore, it is very important to clean the internal system at least every 3 months or whenever the digital displays shows


“CLEAN” after a brew cycle is done. The higher the mineral content in the water you use, the more often you should clean. Regular internal system cleaning will prolong the life of your coffeemaker and help guarantee an optimal brew result.



BUNN ACCESSORIES

BUNN offers a complete line of accessories including paper filters, glass carafes, thermal carafes, replacement funnels, and more.

Visit www.bunn.com to order parts and accessories, or call the BUNN Home Products Team at 1-800-352-2866.

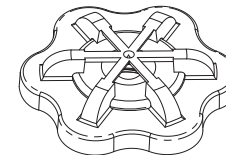

1. Remove the Sprayhead located above the Brew Funnel by turning with your fingertips.
2. Check the Sprayhead. If plugged with mineral deposits or white flakes, use a toothpick to remove. Clean the Sprayhead with a cloth and mild detergent. Rinse the Sprayhead with water.
3. Slide empty Brew Funnel into the Funnel Guides under the Sprayhead.
4. Open the Flip Lid on top of the coffeemaker and fill coffeemaker with equal parts of water and white vinegar solution (25 oz each).
5. Close the Flip Lid.
6. Place empty Carafe on the base Warmer Plate of coffeemaker.
7. Let solution set for a few minutes.
8. Press the Brew button to cycle the vinegar solution through the coffeemaker.
9. Empty carafe at end of cycle.
10. Run 3 or more additional cycles with full carafes of water to flush remaining vinegar solution from the coffeemaker.
11. **Reinstall Sprayhead.**
12. To reset the “CLEAN” indicator, press and hold the “H” and “M” buttons for 5 seconds.

Note: For a stronger clean, 100% white vinegar (50oz) can be used. Press the Brew button and let the machine heat for 4 minutes. Then press the Brew button to pause the machine. Let the vinegar soak for 30 minutes. Press the Brew button to restart the machine and finish brew cycle. Run 3 or more cycles with full carafes of water to flush remaining vinegar from coffeemaker.

TROUBLESHOOTING

NOTE: Our friendly Customer Service Group is ready to help at 1-800-352-2866 or online at www.bunn.com

| PROBLEM | SUGGESTIONS |
|--|--|
| Brewer does not turn on | <ul style="list-style-type: none">• Make sure coffeemaker is plugged into a working outlet.• Press the Brew button to begin brew and red light will illuminate. |
| Coffee is not brewing | <ul style="list-style-type: none">• Make sure coffeemaker is plugged into a working outlet.• Make sure coffeemaker is filled with water. A minimum of 4 cups (20oz) is needed to begin brewing.• Make sure coffeemaker clock is set.• Press the Brew button to begin brew and red light will illuminate.• Check to see if Auto-Start time was programmed accurately. |
| Brew time is longer than usual | <ul style="list-style-type: none">• Check Sprayhead holes for debris. Clean Sprayhead and perform Maintenance, see instructions on page 5. |
| Brew funnel overflows | <ul style="list-style-type: none">• Be sure Brew Funnel is properly inserted.• Use BUNN paper filters – they are taller to prevent overflow.• Be sure Sprayhead is in place. |
| Warmer plate stays on after brewing | <ul style="list-style-type: none">• Warmer Plate automatically shuts off after 2 hours. To shut off manually, push the Brew button (red light will turn off).• To turn Warmer Plate back on, press & hold Brew button for 5 seconds. |

| PROBLEM | SUGGESTIONS |
|--|---|
| Programmed Auto-Start did not work | <ul style="list-style-type: none">• Make sure AM/PM was accurately selected.• Reprogram for Daylight Savings Time or a power outage if needed.• Make sure Auto-Start button is illuminated. |
| 'CLEAN' indicator light appears on screen | <ul style="list-style-type: none">• Perform Maintenance, see instructions on page 5.• To reset "CLEAN" indicator, press and hold "H" and "M" buttons for 3 seconds during idle. |
| Water drips through prior to completing Heating or before programmed time | <ul style="list-style-type: none">• Lime or mineral build-up may prevent the valve between the Top Tank and Sprayhead from properly closing. Perform Maintenance, see instructions on page 5. |
| Off taste is detected | <ul style="list-style-type: none">• Perform Maintenance, see instructions on page 5. |
| Error Code: H20 | <ul style="list-style-type: none">• The coffeemaker did not detect water. Check the top tank to make sure coffeemaker is filled with water.• A minimum of 4 cups (20 oz) is needed to begin brewing.• To reset, simultaneously press and hold the clock and auto/start buttons for 5 sec. |
| Brewer did not brew all cups | <ul style="list-style-type: none">• Approximately 2 oz of water is absorbed for every 1 oz of coffee. |

CUSTOMER SUPPORT

WWW.BUNN.COM

BUNN-O-MATIC CORPORATION

IN THE UNITED STATES:

1400 Stevenson Drive, Springfield, IL 62703
900 E. Townline Rd., Creston, Iowa 50801
1-800-352-2866

IN CANADA:

280 Industrial Parkway S., Aurora, Ontario L4G 3T9
1-800-263-2256

To receive full assistance, have the Model and Date Code ready when calling.

Record the Model and Date code before using: The model is located on the label at the bottom of the brewer. The date code is located on the metal prongs of your power cord - 4 digits are etched on each side of the metal prongs (Ex. 9999 99CH).

LIMITED WARRANTY

Bunn-O-Matic Corporation (“**BUNN**”) warrants the **BUNN**® Speed Brew Coffee Coffeemaker, except glass carafe, to be free from defects in materials and workmanship existing at the time of manufacture and appearing within the later of the following warranty periods:

- a) Three (3) years from the date of original purchase of a NEW Coffeemaker with delivery of a valid receipt evidencing such purchase or, in the absence of such a receipt, from the date of manufacture; or
- b) One (1) year from the date a REPAIRED OR REPLACEMENT Coffeemaker is received by customer, in the case **BUNN** determined a coffeemaker returned within the NEW Coffeemaker warranty period required repair or replacement.

If such a defect appears during the warranty period, we will (at our sole option) repair or replace the defective Coffeemaker with no charge for service or parts, provided Coffeemaker is delivered at the customer’s expense to one of our authorized service centers (see page 6 for customer service info).

Warranty does not cover claims resulting from misuse, failure to follow instructions on installation and use, use with water having a high mineral content, neglect, use of unauthorized attachments, commercial use, use on a current or voltage other than specified on the Coffeemaker, or unauthorized service during the warranty period on conditions otherwise covered by warranty.

THIS WARRANTY SHALL BE EXCLUSIVE AND SHALL BE IN LIEU OF ANY OTHER WARRANTY, WRITTEN, ORAL, OR IMPLIED INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. In any event, the duration of any warranties implied by law, including but not limited to any implied warranties of merchantability or fitness for a particular purpose, is expressly limited to the duration of this limited warranty. Some states do not allow time limitations on implied warranties, so the above limitation may not apply to you.

THE CUSTOMER’S EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY OR OF ANY IMPLIED WARRANTY, OR OF ANY OTHER OBLIGATION ARISING BY OPERATION OF LAW OR OTHERWISE, SHALL BE LIMITED AS SPECIFIED HEREIN TO REPAIR OR REPLACEMENT, AT OUR SOLE OPTION. IN ANY EVENT, RESPONSIBILITY FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES IS EXPRESSLY EXCLUDED. Some states do not allow limitation or exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights; you may have other rights, which vary from state to state.

TRADEMARKS

BUNN Pour-O-Matic, **BUNN**, **BUNN** with the stylized red line, The Horizontal Red Line, Bunn-OMatic, Bunn-O-Matic, Velocity Brew, My Café, Speed Brew, Phase Brew, trifecta, Air Infusion, Quality Beverage Equipment Worldwide, The Mark of Quality in Beverage Equipment Worldwide, A Partner You Can Count On, Brew Better Not Bitter, Brew better, not bitter., Coffee At Its Best, Nothing Brews Like a **BUNN**, Respect Earth, Respect Earth with the stylized leaf and coffee cherry design, are either trademarks or registered trademarks of Bunn-O-Matic Corporation.



The BUNN logo is a trademark of Bunn-O-Matic Corporation.
52774.0001 C 12/18 © 2017 BUNN-O-MATIC CORPORATION
www.bunn.com

ENJOY