Tribit FlyBuds 3

— True Wireless Earbuds — Model: BTH92

English User Manual

Benutzerhandbuch | Guide Utilisateur | Manual de Usuario

Manuale Utente | 取扱說明書

English User Manual	01
Benutzerhandbuch	11
Guide Utilisateur	20
Manual de Usuario	29
Manuale Utente	38
取扱説明書	47

Package Contents



Earbud(L/R)+Charging Case



Ear Hooks (2 Pairs)



USB-C Charging Cable








User Manual



Thank-you Card


Product Parts

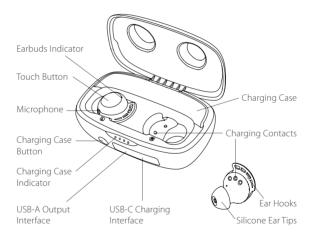

How to Replace the Ear Tips



 How to Wear the Earbuds



On / Off

The first time you use the earbuds, please tear off the insulation sticker. Then place them in the charging case and close it.



To turn On: open the charging case.



Please tear off the insulation sticker.



To turn Off: close the charging case.

Bluetooth Connection Guidelines

Connect the earbuds with a Bluetooth device

Open the top cover of the charging case, and the earbuds will automatically enter Bluetooth pairing mode. Open the Bluetooth function in the Bluetooth device, refresh the Bluetooth device search and click the audio device named "FlyBuds 3" to connect. After successfully connecting, the earbuds indicator will go off



• The two ways to connect with other devices are as follows:

- Please disconnect the earbuds with the currently connected Bluetooth device, and the earbuds will automatically enter Bluetooth pairing mode.
- 2. Please refer to number 11, earbuds reset operation. After resetting successfully, they will enter Bluetooth pairing mode.

Button Functionality



- Play / pause the music: Double-tap
- Answer / End a call: Double-tap
- Next track: Triple-tap
- Reject the incoming call (incoming call status):

Press and hold the touch button for 2s

Activate voice assistant:

Press and hold the touch button for 2s and you hear the prompt tone, and then release it

Earbuds Indicator Light Display

 
Touch Button: white light is on when touched. **Bluetooth Pairing:** red light flashes slowly.

Successful Connection: indicator light is off.

Low Battery: red light quickly flashes twice every 20s.

Charging Case Indicator Display

 Open the upper cover of the charging case or short press the charging case button to display the battery power for 10 seconds.



 Indicator light displays when the earbuds are in the charging mode.

The left-most and right-most indicator lights of the charging case will show the charging status of the left and right earbuds respectively. During the charging process, the indicator lights will always be on. When fully charged, they will be off.

Charging Guidelines

 Charging of the earbuds: Put earbuds into the charging case. Then close the cover and charging will begin.

Charging time of earbuds: about 90 minutes

 Charging of the charging case: Insert one end of the USB cable into a power supply that supports 5V output, and the other end into the charging port of the charging case. The indicator lights will flash while it is charging, and the 4 indicator lights will always be on when it is fully charged.

Charging time of the charging case: about 210 minutes

How to Reset the Earbuds

Place the left and right earbuds back into the charging case. With the cover open, press and hold the charging case button until the 4 indicator lights of the charging case flash four times at the same time, indicating that the earbuds are successfully reset.

Note: If there is a Bluetooth device connected to the earbuds after resetting, the pairing will need to be deleted for successful re-pairing.

The Left & Right Earbuds Pairing Guidelines

First disconnect the earbuds from the Bluetooth device. Put the left and right earbuds into the charging case, then take them out. Double-tap the touch button and the red light will flash slowly. Then long press the touch button until the red light flash slowly, After a few seconds, the red light on the left earbud will flash slowly, and the red light on the right earbud will be off, indicating that the left and right earbuds are successfully paired and connected.

Note: When the left and right earbuds lose connection.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to

radio communication. However, there is no guarantee that interference won't occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. Users are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit that is different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.